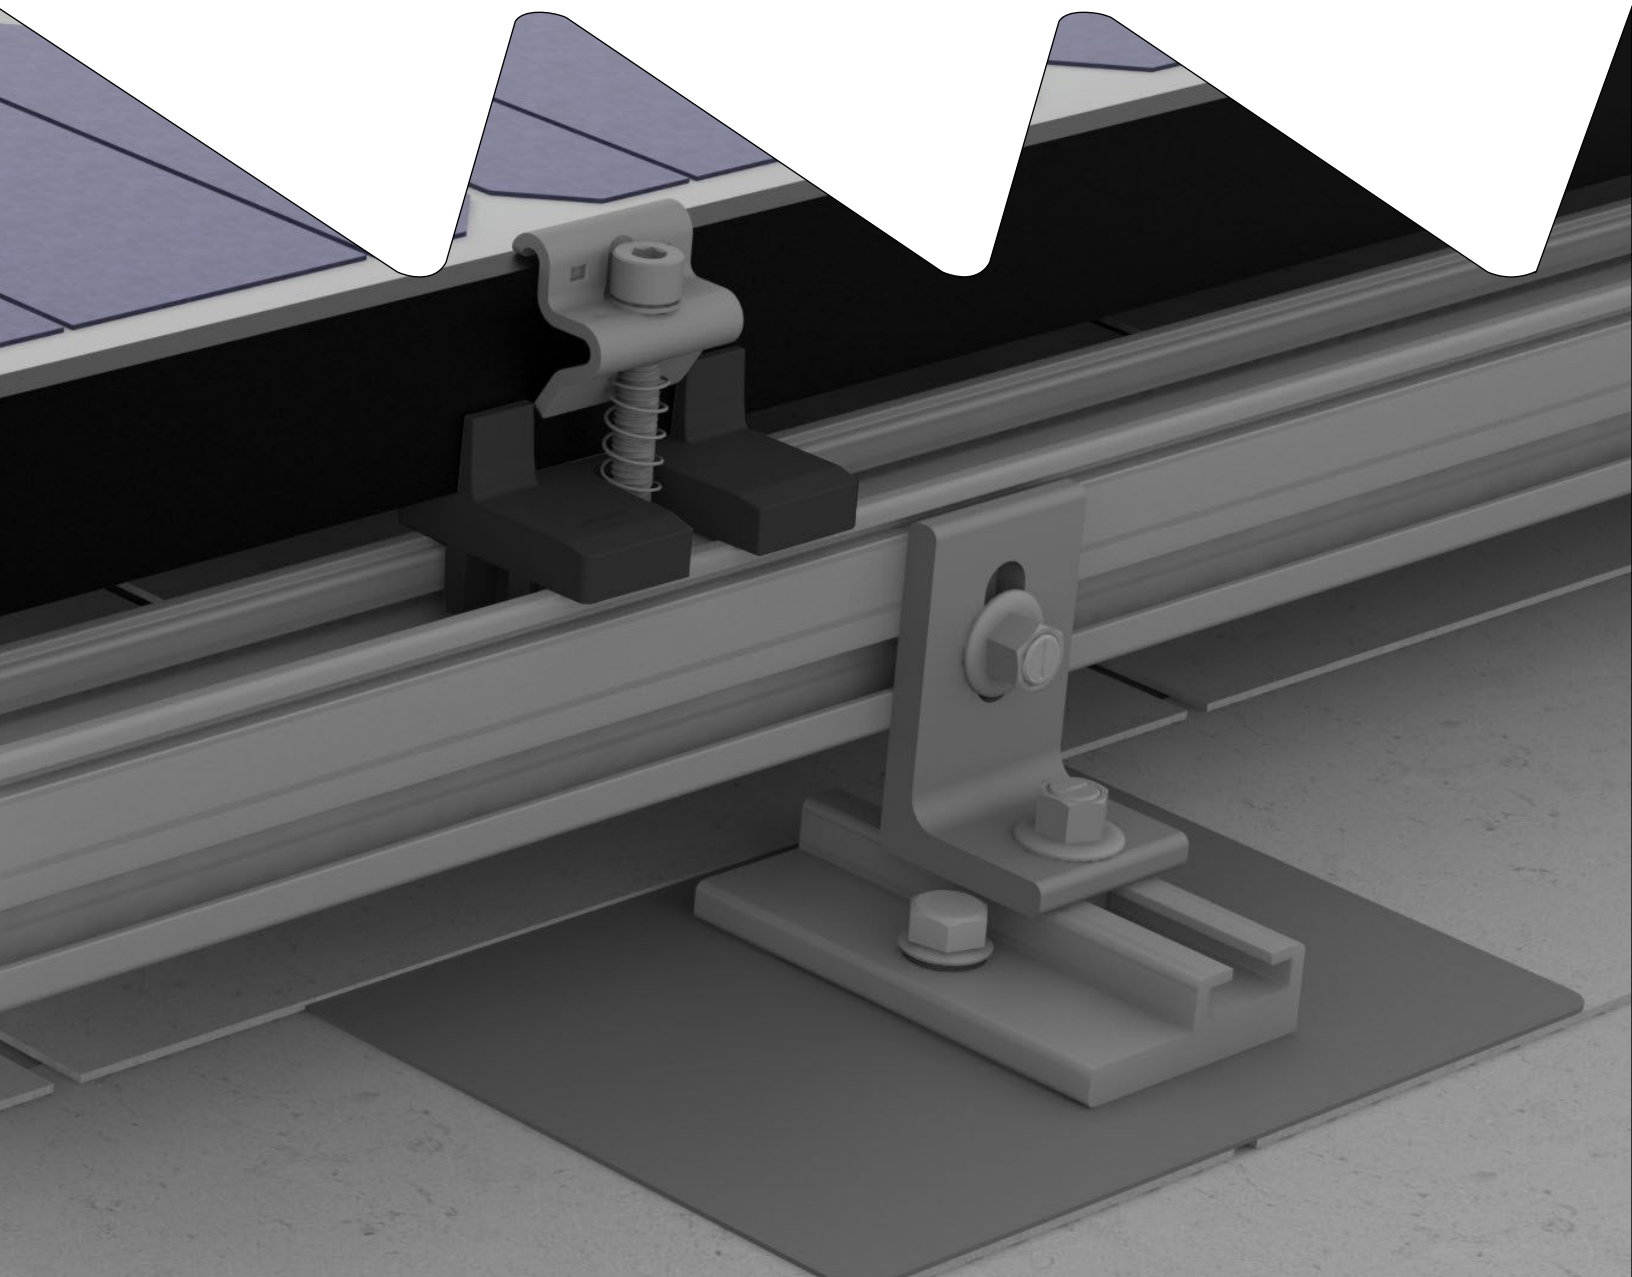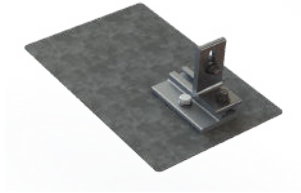# EverFlash eComp +
SR Slide Kit

QUICK GUIDE

Components

1 4000015 / 4000027 / 4000029

EverFlash eComp + SR Slide Kit

Tools Overview

≥ 10 ft

≥ 6,0 m
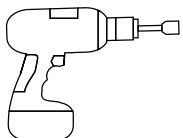
13 mm deep socket
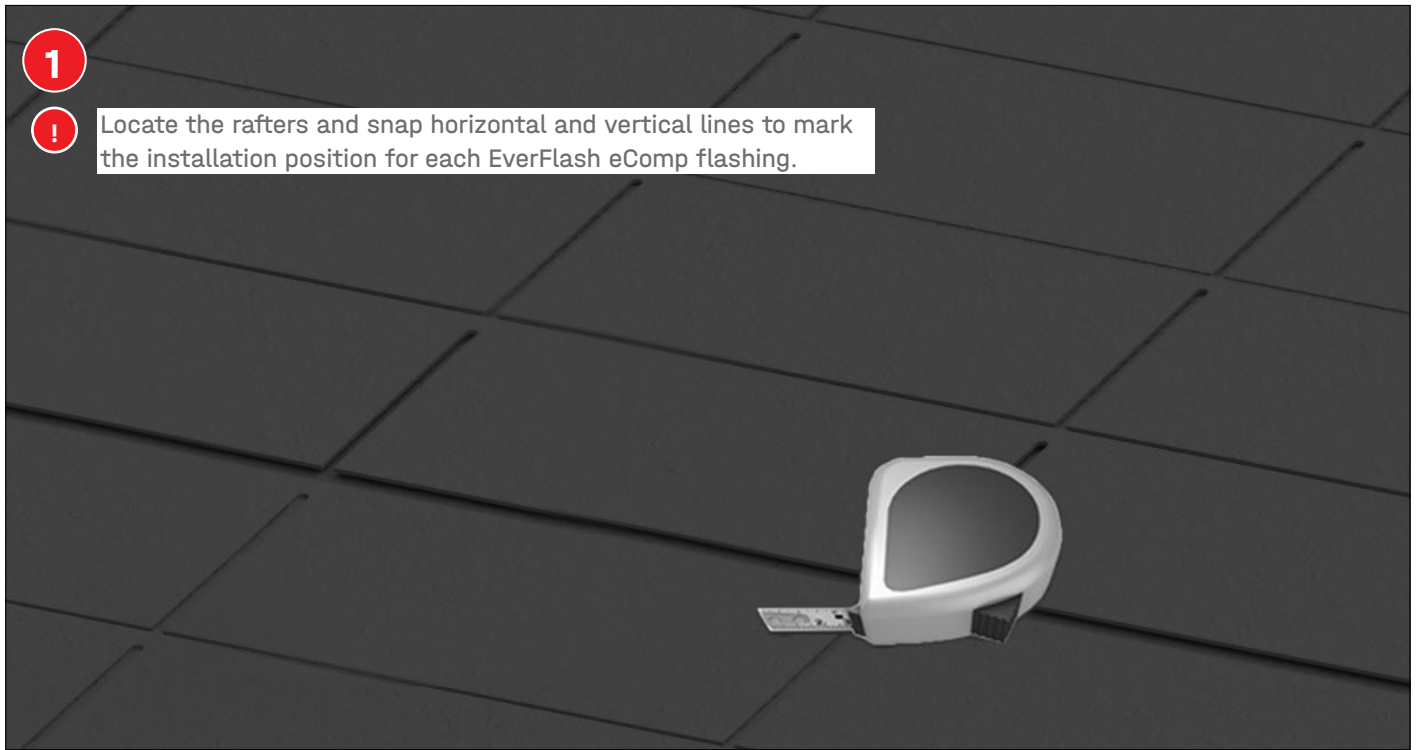**/** Torque 10 ft-lbs

Assembly

1

! Locate the rafters and snap horizontal and vertical lines to mark the installation position for each EverFlash eComp flashing.

2

! It is important to remove any obstructing nails in the 2nd course of shingles as they can prevent the flashing from extending up under the 3rd course of shingles.

This is required by the roofing manufacturer's instructions and warranties, and the Asphalt Roofing Manufacturer's Association guidelines.

Use roofing bar to break the seals between the 1st and 2nd, and 2nd and 3rd shingle courses. Be sure to remove all nails to allow correct placement of flashing.

3

! Drill a 3″ deep pilot hole by drilling square to the rafter using a 7/32″ aircraft extension bit.
If the pilot is severely out of square, the roof sealing washer may not compress consistently
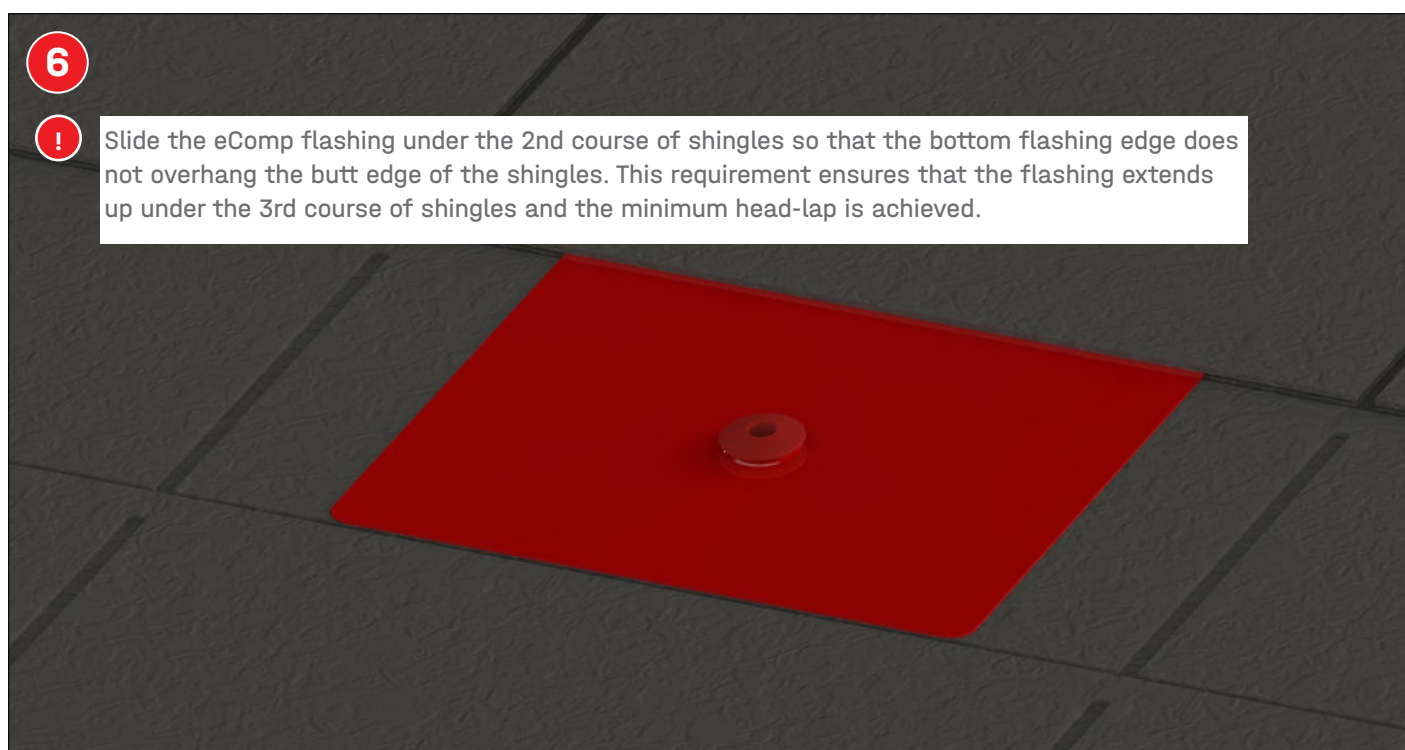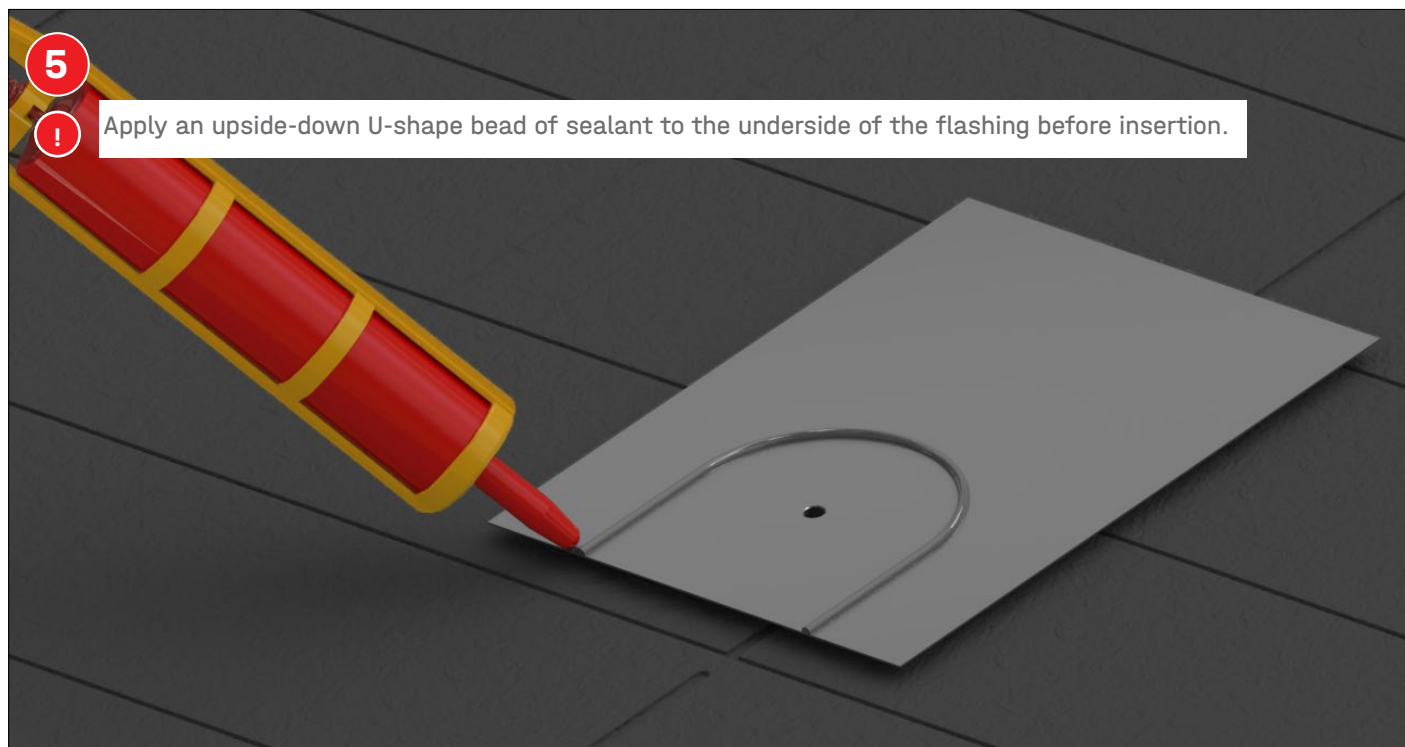and the seal may be compromised.

4

! Filling the pilot
hole with sealant
is a secondary
waterproofing step,
which is required
by the roofing
manufacturers.

5

! Apply an upside-down U-shape bead of sealant to the underside of the flashing before insertion.

6

! Slide the eComp flashing under the 2nd course of shingles so that the bottom flashing edge does not overhang the butt edge of the shingles. This requirement ensures that the flashing extends up under the 3rd course of shingles and the minimum head-lap is achieved.
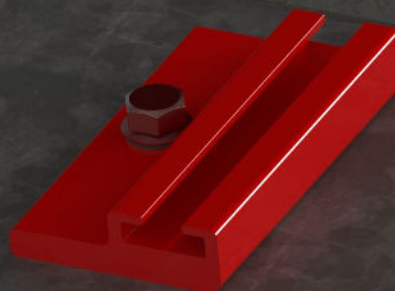
7

! Swivel the Slide Kit to gauge proper torque when driving the lag screw. Tighten until the Slide Kit stops swiveling easily.

The torque range is between 8.3–11.6 ft-lb depending on the type of wood and time of year. If using an impact wrench to install the fasteners, be careful not to over-torque the fastener. You may need to stop and use a ratchet to finish the install.

8

! Insert T-Bolt through bottom L-Foot slot and into the Slide Bracket. Adjust the L-Foot to your desired position. Turn the T-Bolt clockwise ensuring that the mark at the end of the shaft is vertical, indicating proper alignment. Tighten to 25.8 ft-lbs (35 Nm). To attach the CrossRail, repeat the T-Bolt install process by inserting the T-Bolt through the top L-Foot slot and into the side channel of CrossRail.
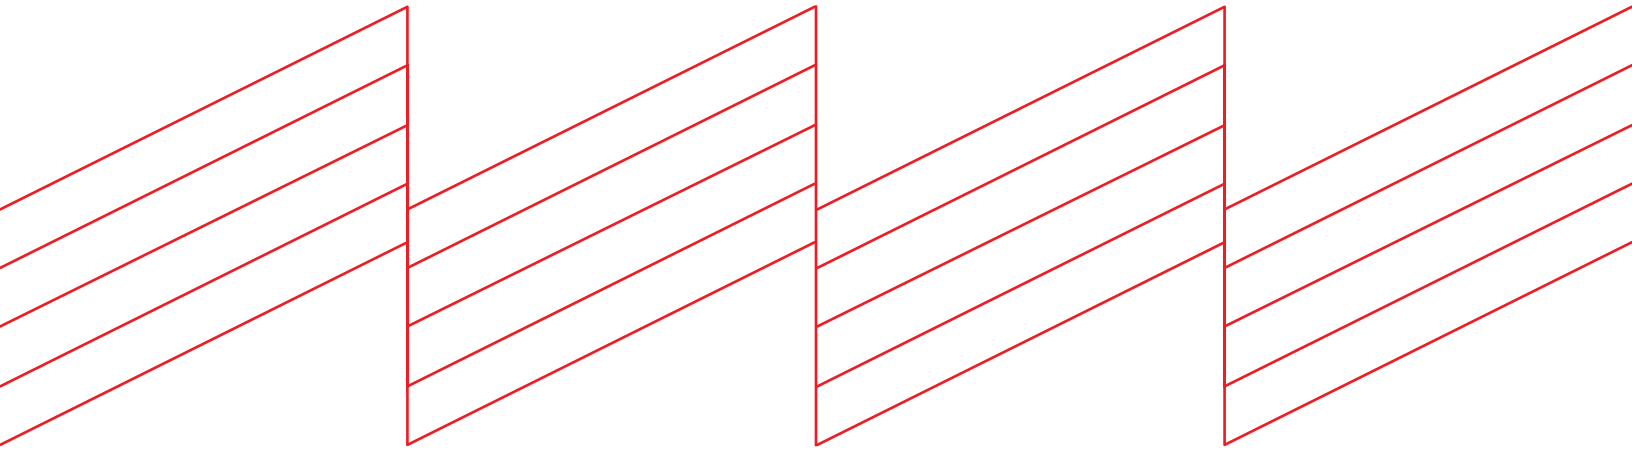
K2 Systems, LLC

4665 North Ave. Suite I • Oceanside, CA 92056 •
USA +1.760.301.5300 • infous@k2-systems.com
www.k2-systems.com

EverFlash eComp + SR Slide Kit Quick Guide V2 | 1123 • Subject to change
Product illustrations are exemplary and may differ from the original.